


AMM - P1 IGNITION SENSOR INSTALLATION



DIPL.-ING. CHARLES ALTMANN
ERLENSTR. 15
42697 SOLINGEN • GERMANY
TEL FAX: +49(0) 212 - 233 - 7039

!!! **Clockwise Rotation** !!! Check points **A, B, C, D** !

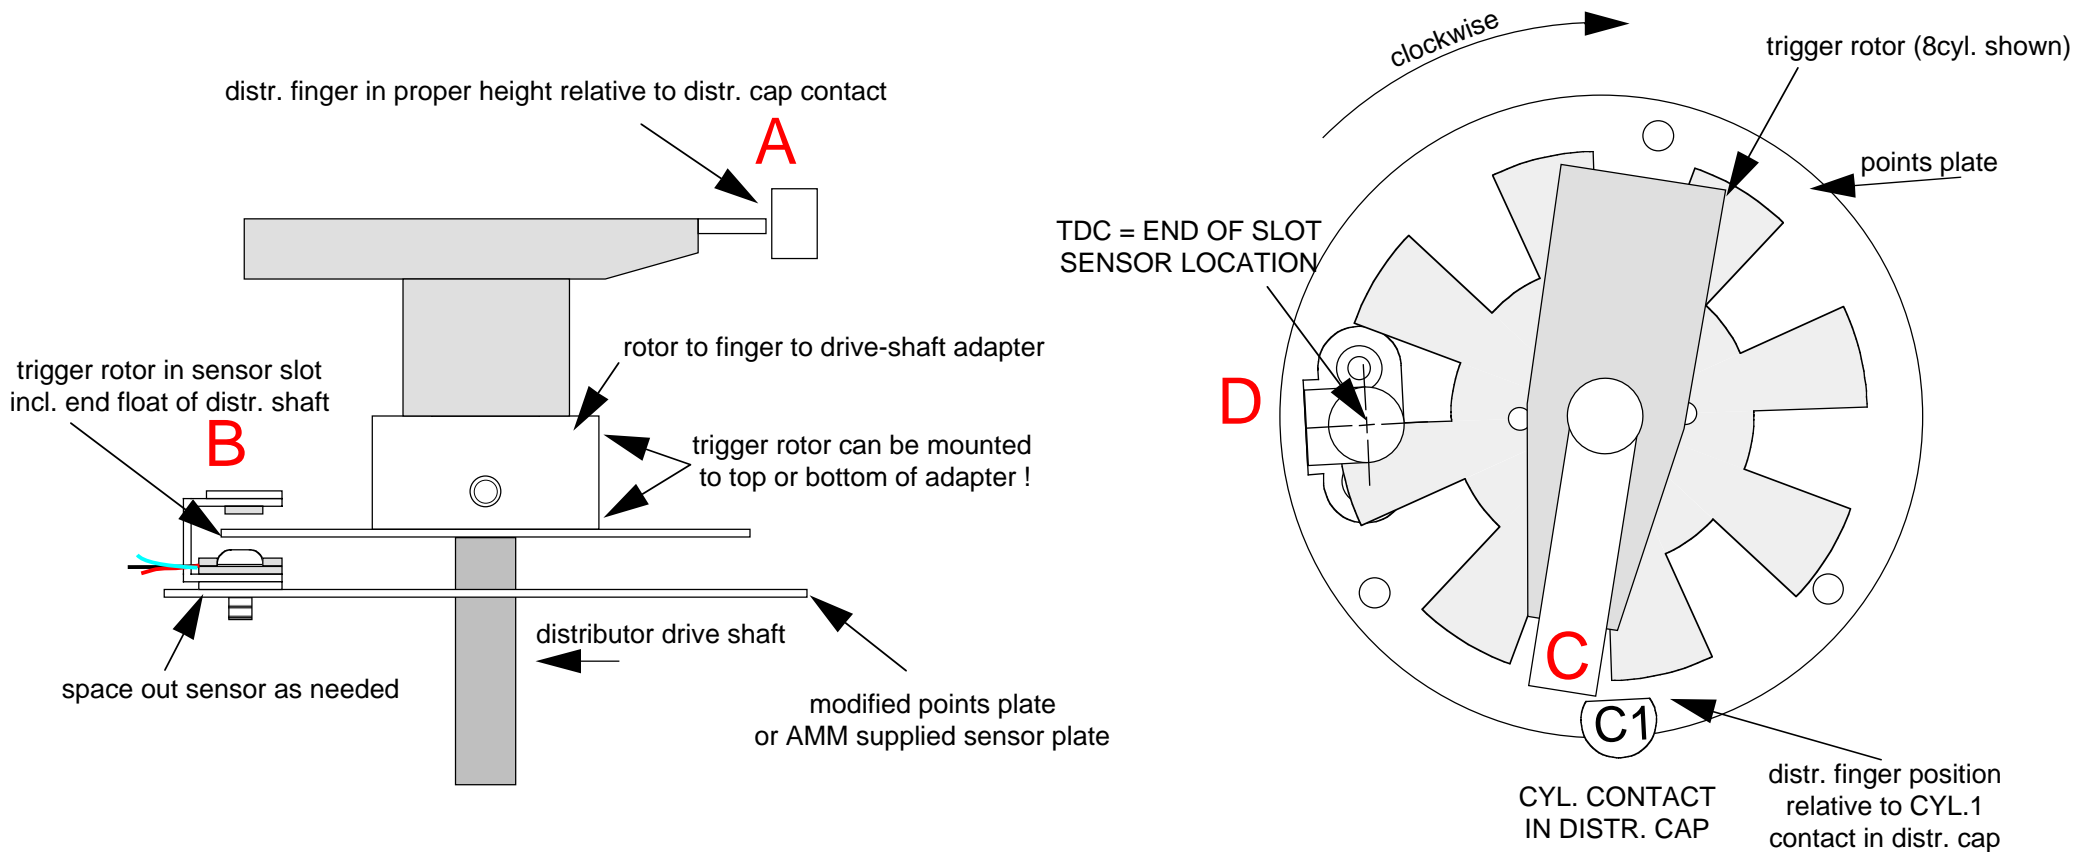

TIPS

First assure proper height of distributor-finger in distributor-cap using the supplied adapter. Then decide if trigger rotor should be mounted on top- or bottom-face of adapter (depending on the available space inside the distributor), so that proper sensor gap can be achieved. Spacers below the sensor may be necessary.

After finger-height and sensor-gap have been checked, position the finger pointing to the trailing edge of one of the contact points inside the distributor cap, as shown above. With distributor-finger in this position, correct sensor position is at end of (any) slot of trigger rotor. Mount Sensor here.