



**ERROR CODES:**

On Error 1 red LED blinks once, on Error 2 blinks twice, etc..

**Error 1:** Throttle-potentiometer not connected, throttle input out of range.

**Error 2:** Throttle-pot not in zero position after Power-On.

**Error 3:** Current-measurement not zero after Power-On.

**Error 4..6:** not implemented.

For errors 1..6 operation resumes after error condition is removed.

**Error 7:** Transistor fail -> on-board relay switches off (main-contactor supply). Red LED blinks fast until power-down.

Error 7 requires complete power-down and system check (does not resume operation).

